











## What to do if... What to do if...

	A tire punctures	P. 556/ 566	If you have a flat tire
	The engine does not start	P. 85 P. 568 P. 574	Immobilizer system If the engine will not start If the 12 volt battery is discharged
	The shift lever cannot be moved out	P. 569	If the shift lever cannot be shifted from "P"
	The engine coolant temperature gauge enters the red zone	P. 578	If your vehicle overheats
	Steam can be seen coming from under the hood		
	The key is lost	P. 570	If you lose your keys
	The 12 volt battery runs out	P. 574	If the 12 volt battery is discharged
	The doors cannot be locked	P. 43	Doors
	The horn begins to sound	P. 87	Alarm
	The vehicle is stuck in mud or sand	P. 581	If the vehicle becomes stuck



The warning light or indicator light comes on

P. 534

If a warning light turns on or a warning buzzer sounds...



# Warning lights



Brake system warning light

or



P. 534



Malfunction indicator lamp

or



P. 535



ABS warning light

or



P. 535



Driver's seat belt reminder light

P. 536



Front passenger's seat belt reminder light

P. 537



ECB\* warning light

P. 535



Tire pressure warning light

P. 537



Low fuel level warning light

P. 536



Electric power steering warning light

P. 535



SRS warning light

P. 535



Pre-collision system warning light

P. 535



Open door warning light

P. 536



Slip indicator

P. 536



Charging system warning light

P. 534



Master warning light

P. 537

\*: Electronically Controlled Brake System

## What to do if...



The warning message is displayed

P. 543

If a warning message is displayed

What to do if...